

# Disinfection

## Respire filter mask





### Important:


- Always start by washing the mask and breathing valve in accordance with the user manual and/or separate washing instruction.
- The mask and breathing valve must be disinfected separately.
- Use the disinfectant recommended by Interspiro.
- The Interspiro disinfectant is highly flammable, read the safety data sheet
- Make sure that there is good ventilation.
- Use the protective equipment stipulated by your organization to protect against virus exposure.

### Disinfection of the mask


- Open the exhalation valve cover, remove the spring holder and the exhalation valve assembly (for detailed removal instructions see the user manual).
- Place the mask and the removed parts in the disinfectant, make sure they are entirely covered.
- Leave the mask in the disinfectant solution for 5 minutes. Longer exposure times might cause damage to the equipment.

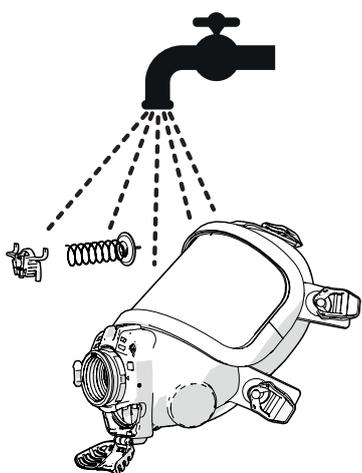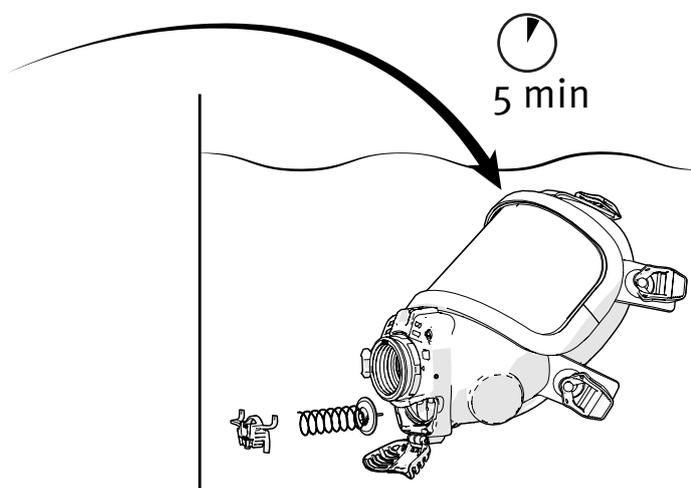

- Thoroughly rinse the mask and the parts in fresh water.

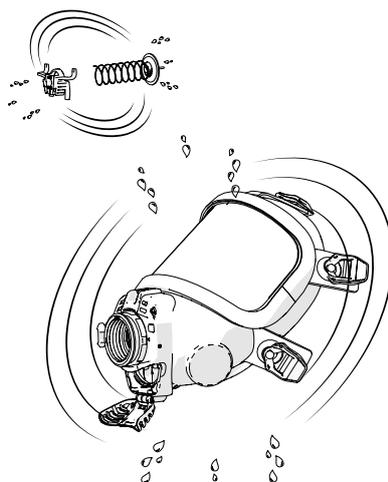

- Shake off excess water.

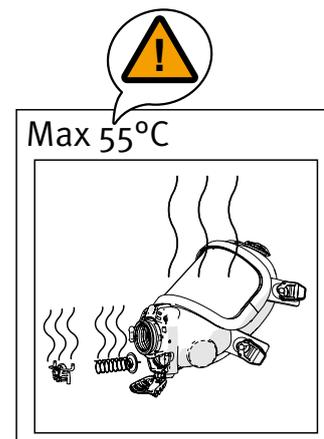

- Leave the mask and parts to dry. A drying cabinet can be used, maximum 55 °C for 2 hours.